

INSTRUCTION OF AIRWALL



1 After unpacking the airgate put it on the ground and open the airgate outfull.



2 Next secure the clamps to the airgate.



3 Connect the plug socket in order to start the process of inflating. Remember not to cover the extractor fan.



4 Plug with extension can be secured by inserting into the airgate.




5 Close the zip by base of the airgate.



6 Wait until the airgate is inflated.



7 After the airgate is inflated secure the other end of the rope into the ground with a hammer and pegs.

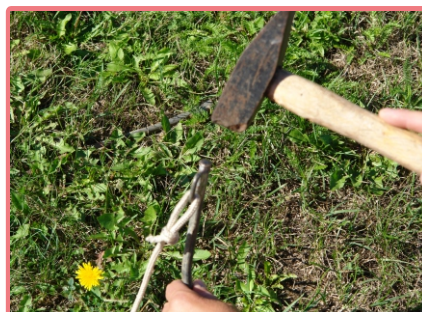

8 Follow the previous two steps and secure all ropes to the gate and ground. By using the cord and ropes try to regulate the vertical of airgate.



9 The last stage is to secure the base of airgate by using the pegs hammering into the ground through the pegs - gap.

* Assembly of the advertising net, please follow these steps before you set up the airwall: Take out the net with the graphic and put it on the edge of the airwall. Next, spread the net and attach it to the airwall. If the net was attached perfectly it will suit the other edge of the airwall. When the graphic is mounted, go to point 6. To set the airwall one should open the lock. The dismantling works the other way around. First, pull out the pins on the net, otherwise you might have holes in the airwall.